

BRAKE CONTROL CONNECTOR Chevy, GMC, Cadillac, Hummer




INSTALLATION INSTRUCTIONS

⚠ WARNING: The attachment and installation of this product is beyond the control of Winston Products, LLC. Winston Products, LLC is not responsible for the attachment or the installation of this product. Winston Products, LLC is not liable for damages and/or injuries that are the result of improper use/ attachment or are the result of use beyond the intended towing application. The liability of this product is limited to the purchase price if it proves to be defective in material and/or workmanship. Any and all warranties, explicit or implied, are void if the product is damaged or worn.

1. Depending on the vehicle, the loose red wire will need to be inserted into the brake control connector.
For 1999-02 model years, use slot (Figure 1). For 2003-07 model years, use slot (Figure 2).
2. Locate the vehicle connector within the fuse panel box under the dash below the steering wheel.
3. Remove the nut and box cover.
4. Plug the mating end of the brake control connector (Figure 3, A) into the vehicle connector on the panel. (Figure 3, B)
5. Plug the other end into the brake control of choice.
6. Test all functions for performance.
7. Attach the box cover and nut.

Wire Code:

- White = Ground
- Blue = Electric Brake
- Black = Battery
- Red = Stop Lamp Switch

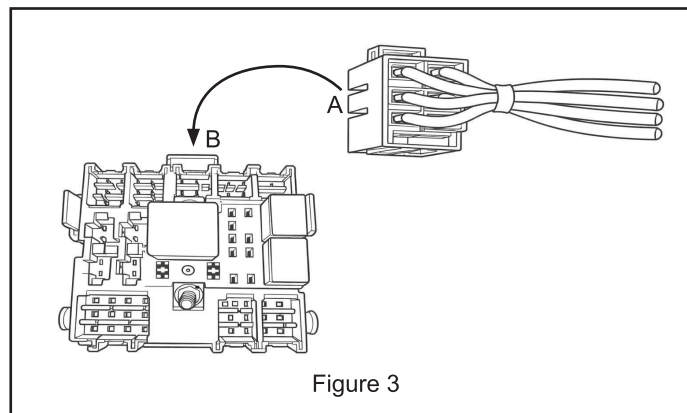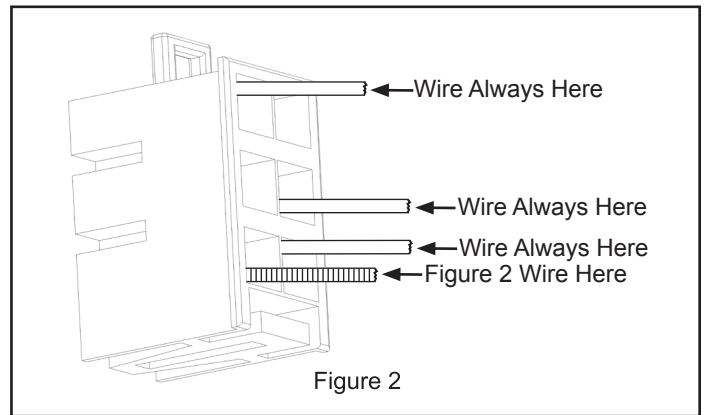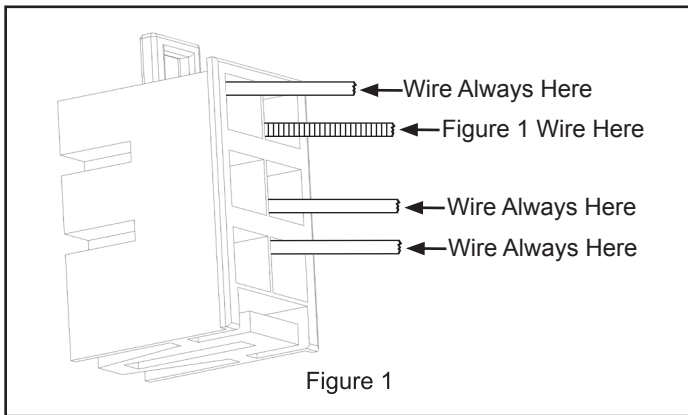

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT WWW.TOWSMART.COM.