

## ADAPTER, 4-Flat to 5-Flat

### INSTALLATION INSTRUCTIONS

**⚠ WARNING:** The attachment and installation of this product is beyond the control of Winston Products, LLC. Winston Products, LLC is not responsible for the attachment or the installation of this product. Winston Products, LLC is not liable for damages and/or injuries that are the result of improper use/attachment or are the result of use beyond the intended towing application. The liability of this product is limited to the purchase price if it proves to be defective in material and/or workmanship. Any and all warranties, explicit or implied, are void if the product is damaged or worn.

#### WIRE IDENTIFICATION:

GD = Ground

TM = Taillight

LT = Left Turn/Brake

RT = Right Turn/Brake


BU = Backup/Reverse

1. Locate the reverse/backup wire at the rear of the tow vehicle.
2. Attach individual blue wire (A) onto the backup function wire.
3. Attach the male bullet terminal from the adapter into the mating terminal on the blue wire.
4. Attach the 4-flat from the adapter into the vehicle 4-flat tow connector and the 5-flat end into the trailer.
5. Attach trailer coupler to the hitch ball on the tow vehicle and test all functions.

#### NOTE:

Locate wires and pin location by function only. Color coding is not standard among manufacturers.

Dielectric grease applied to the terminals on a regular basis will assist in preventing corrosion.

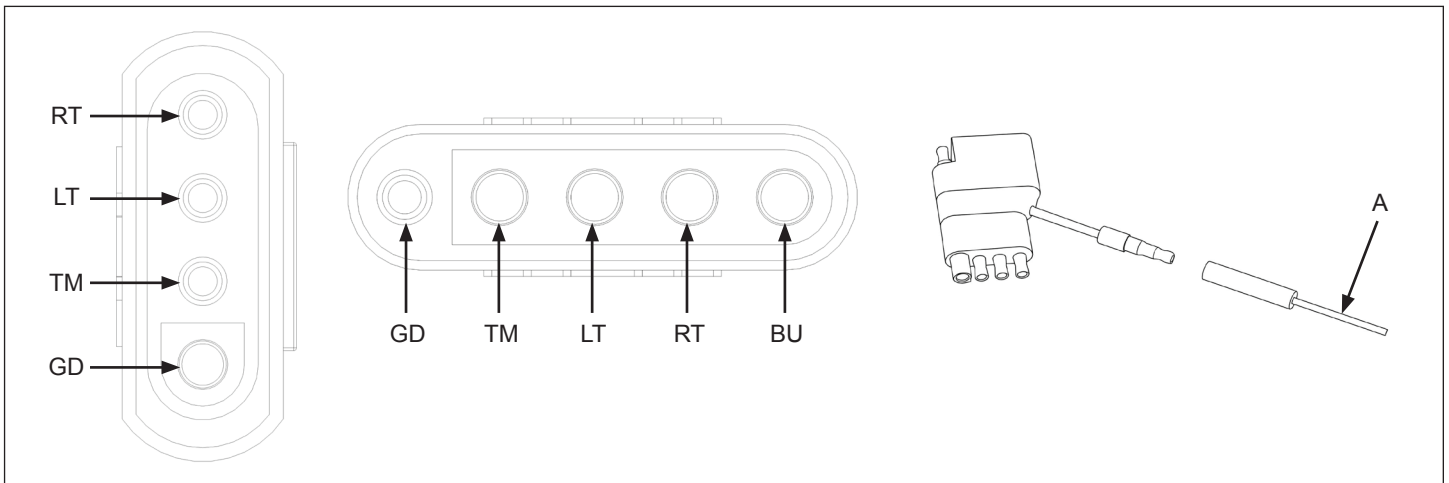

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT [WWW.TOWSMART.COM](http://WWW.TOWSMART.COM).