

LED TRAILER LIGHT KIT

INSTALLATION INSTRUCTIONS


READ ALL WARNINGS AND INSTRUCTIONS BEFORE INSTALLATION

⚠ WARNING: The attachment and installation of this product is beyond the control of Winston Products, LLC. Winston Products, LLC is not responsible for the attachment or the installation of this product. Winston Products, LLC is not liable for damages and/or injuries that are the result of improper use/attachment or are the result of use beyond the intended towing application. The liability of this product is limited to the purchase price if it proves to be defective in material and/or workmanship. Any and all warranties, explicit or implied, are void if the product is damaged or worn.

INSTALLATION INSTRUCTIONS

1. Disconnect power supply.
 2. Select suitable light mounting locations. The light assembly with the green wire lead is for the right rear/curbside of the trailer. The light assembly with the yellow wire is for the left rear/road side of the trailer.
 3. Mark the two mounting holes on the trailer for the mounting studs for both light assemblies. Drill hole for wire access if necessary.
 4. Mount the supplied license plate bracket over the bolt ends of the left hand taillight assembly with the smooth face of the bracket facing the front of the trailer.
 5. Mount the light assemblies to the trailer body with a washer and nut, so that the side indicator lights face outward.
 6. With the molded connector end of the wire assembly at the trailer tongue, attach the white, ground wire to the trailer with the supplied circle end wire connector and screw.
- NOTE:** For proper light function a good ground must be achieved.
7. Run the green, blue and brown wire leads along the passenger side/right of the trailer. Connect the green, brown and blue wire leads from the connector to the taillight assembly. Continue running the blue wire across the trailer to the driver side/left taillight assembly and attach to the reverse wire. Install wire clips along the length of the trailer so that the wire will not get caught on trailer components, debris, or any other objects during operation.
 8. Run the yellow and brown wire leads along the driver side/left of the trailer. Connect the yellow and brown wire leads from the connector to the taillight assembly. Install wire clips along the length of the trailer so that the wire will not get caught on trailer components, debris, or any other objects during operation.
 9. Attach the white ground wire from the light assemblies to the trailer frame or solid metal surface free of rust or paint.
 10. Connect the trailer wiring to the vehicle and test lights. With the vehicle lights on, the tail and side marker lights or both trailer light assemblies should illuminate. The brighter stop and turn light for each assembly should illuminate when the brakes are depressed or when the corresponding turn signal is activated.

NOTE: If lights do not function, check all ground connections between vehicle wiring and trailer connector.

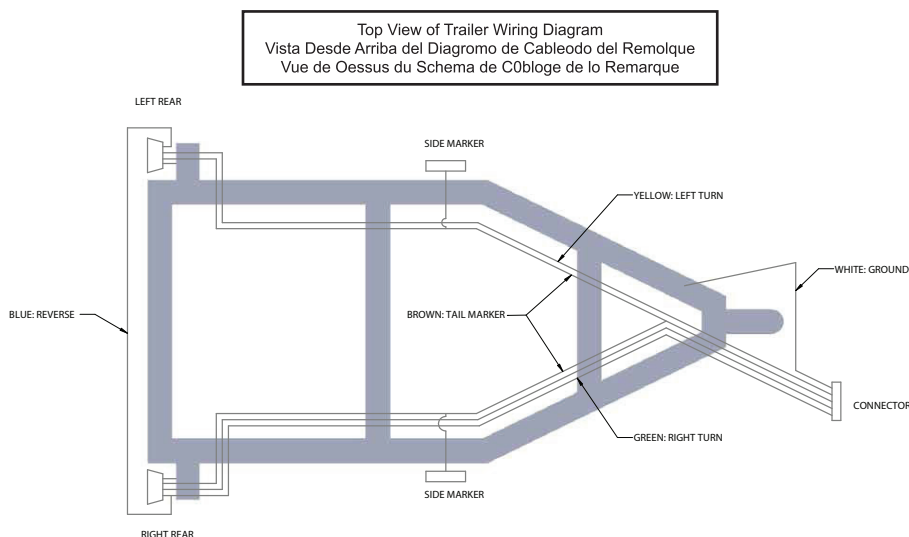

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT WWW.TOWSMART.COM.



A Winston Products Company
TOWSMART.COM
WINSTON PRODUCTS, LLC.
30339 Diamond Parkway
Cleveland, OH 44139