

Hitch, 2" Receiver, Mazda, CX-50

INSTALLATION INSTRUCTIONS

READ ALL WARNINGS AND INSTRUCTIONS BEFORE INSTALLATION

⚠ WARNING: Never exceed the vehicle manufacturer's recommended towing capacity.

NOTICE:

- Always use proper tools and safety equipment to ensure a safe and quality installation.
- Inspection of the trailer hitch should be performed before and after each use to ensure all mounting hardware is tight and related hitch components are secure.

⚠ WARNING: Before you begin installation, read all instructions thoroughly.

⚠ WARNING: Safety glasses should be worn at all times while installing this product.

⚠ WARNING: Failure to adhere to exact torque specifications when securing hardware during the installation process can result in damage to the product or your vehicle. This will void the hitch warranty.

LEVEL OF DIFFICULTY: Easy

Installation difficulty levels are based on time and depend on the installer's expertise, condition of the vehicle, and the usage of proper tools and equipment.

WEIGHT CARRYING CAPACITY

Gross Trailer Weight (GTW)	4,500 lb
Tongue Weight (TW)	675 lb

WEIGHT DISTRIBUTION CAPACITY

Weight Distribution (WD)	NA
WD Tongue Weight (WDTW)	NA

PARTS LIST


Item	Qty	Description
1	1	Trailer Hitch
2	4	Hex Bolt, M12-1.25 x 40mm
3	4	Conical- Toothed Washer, ½"

TOOLS REQUIRED

Ratchet
Socket, 19mm
Cut-Off Wheel
Tape
Torque Wrench
Flathead Screwdriver
Phillips Screwdriver
Safety Glasses

PARTS LIST

Item	Qty	Description
1	1	Trailer Hitch
2	4	Hex Bolt, M12-1.25 x 40mm
3	4	Conical- Toothed Washer, 1/2"

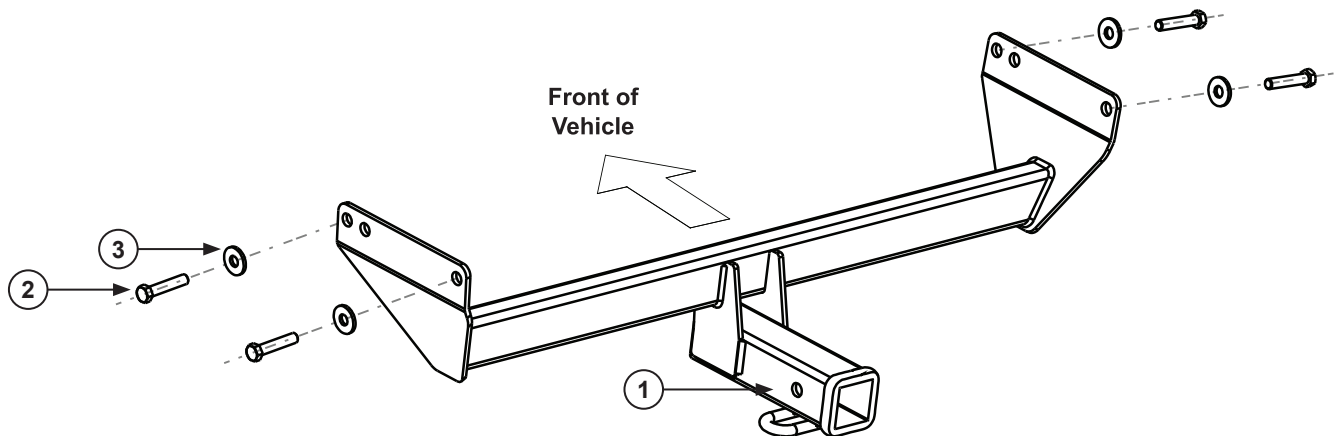

INSTALLATION:

1. Remove hitch panel from the center of the bumper by removing two screws.
2. Using tape, mark the bumper support in line with the slot for the hitch panel and trim the center of the bumper support using a cut-off wheel.
3. Using a flathead screwdriver, remove the tape from the outside of the frame rails covering the weld nuts in the frame.
4. Raise the hitch into position and secure it with the supplied M12 bolts (Item #2) and conical-toothed washers (Item #3)
5. Ensure to torque all M12 Hardware to 86 ft-lbs.

TOWING BASICS & SAFETY INFORMATION :

For information on safe towing, visit TowSmart.com

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT, DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT TOWSMART.COM.



A Winston Products Company
TOWSMART.COM
WINSTON PRODUCTS, LLC.
30339 Diamond Parkway
Cleveland, OH 44139