

Hitch, 2" Receiver, Chevrolet Trax / Buick Envista

INSTALLATION INSTRUCTIONS

READ ALL WARNINGS AND INSTRUCTIONS BEFORE INSTALLATION

⚠ WARNING: Never exceed the vehicle manufacturer's recommended towing capacity.

NOTICE:

- Always use proper tools and safety equipment to ensure a safe and quality installation.
- Inspection of the trailer hitch should be performed before and after each use to ensure all mounting hardware is tight and related hitch components are secure.

⚠ WARNING: Before you begin installation, read all instructions thoroughly.

⚠ WARNING: Safety glasses should be worn at all times while installing this product.

⚠ WARNING: Failure to adhere to exact torque specifications when securing hardware during the installation process can result in damage to the product or your vehicle. This will void the hitch warranty.

LEVEL OF DIFFICULTY: Easy

Installation difficulty levels are based on time and depend on the installer's expertise, condition of the vehicle, and the usage of proper tools and equipment.

WEIGHT CARRYING CAPACITY

Gross Trailer Weight (GTW)	2,000 lb
Tongue Weight (TW)	200 lb

WEIGHT DISTRIBUTION CAPACITY

Weight Distribution (WD)	NA
WD Tongue Weight (WDTW)	NA

PARTS LIST


Item	Qty	Description
1	1	Trailer Hitch
2	4	Carriage Bolt, 7/16-14 UNC x 1-1/2", GR8
3	4	Spacer, 7/16" Square Hole, 1/4 x 7/8 x 2-1/4
4	4	Nut, Serrated Flange, 7/16-14 UNC, GR8
5	4	7/16" x 20" Fish Wire

TOOLS REQUIRED

Ratchet
Socket, 17mm
Utility Knife
Torque Wrench
Safety Glasses

PARTS LIST

Item	Qty	Description
1	1	Trailer Hitch
2	4	Carriage Bolt, 7/16-14 UNC x 1-1/2", GR8
3	4	Spacer, 7/16" Square Hole, 1/4 x 7/8 x 2-1/4
4	4	Nut, Serrated Flange, 7/16-14 UNC, GR8
5	4	7/16" x 20" Fish Wire

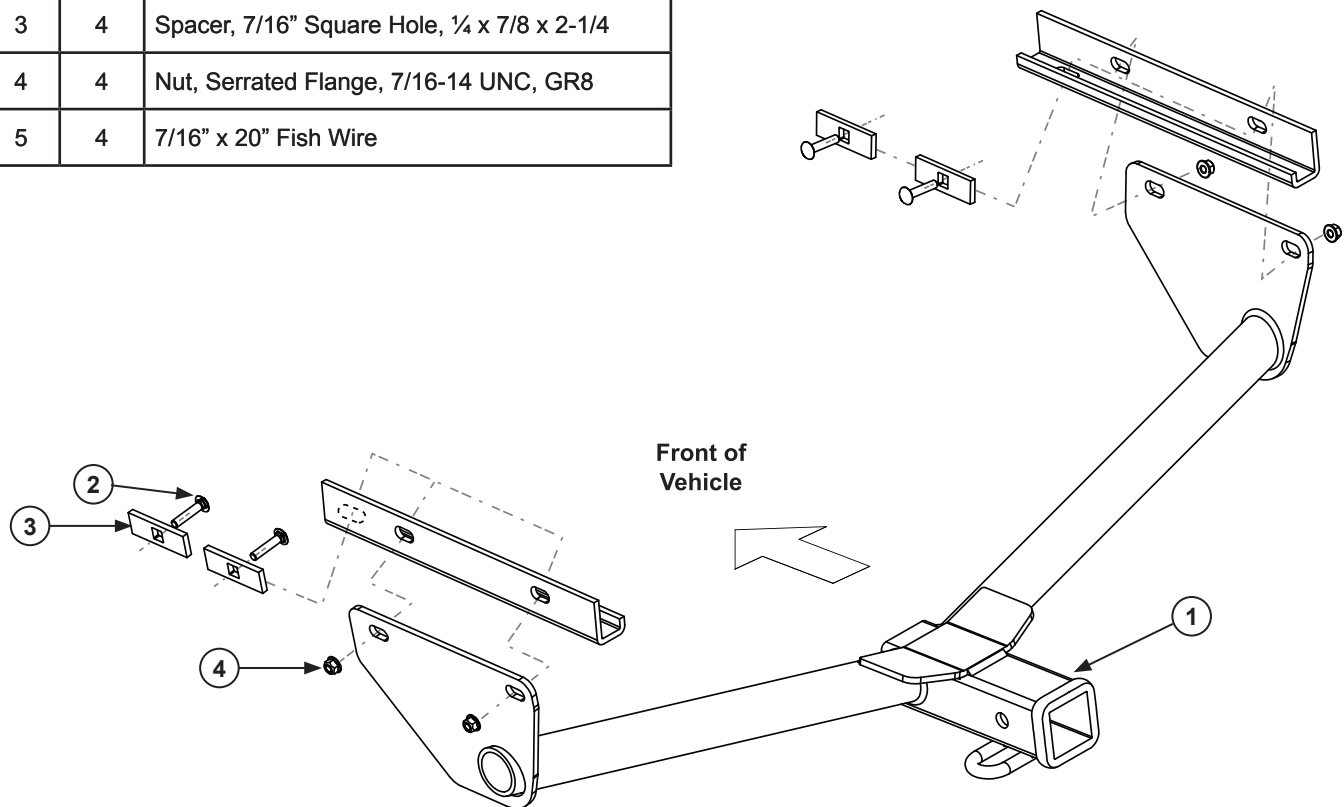

INSTALLATION:

1. Using the provided fish wire, pull two 7/16" carriage bolts (#2) and spacers (#3) into the two rear-most holes in each frame rail through the larger access holes, leaving fish wire attached.
2. Repeat on the other side of the vehicle.
3. Raise the hitch into place using the attached fish wire as a guide and pull the carriage bolts through the mounting holes. It may be necessary to reposition the carriage bolt and spacer to seat flush against the inside of the frame rail.
4. Remove the fish wire from the carriage bolts and hand-tighten the serrated flange nuts (#4) to hold the hitch in place.
If the forward-most holes are difficult to align, it may be necessary to trim some of the caulking along the frame rail seam using a utility knife.
5. Use a torque wrench with a 17mm socket to torque the four 7/16" nuts (#3) to 70 ft-lbs.

FISH WIRE TECHNIQUE:

1. Insert the coiled end of the fish wire tool through the mounting hole in the vehicle frame rail and out the access hole.
2. Thread the coiled end of the fish wire through the spacer and thread the bolt into the coil.
3. Kink the wire to keep the spacer separate from the bolt.
4. Pull the spacer and bolt through the frame and out the mounting hole.
5. Keep the fish wire secure to prevent loss of the bolt or spacer inside the frame rail.

TOWING BASICS & SAFETY INFORMATION :

For information on safe towing, visit TowSmart.com

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT, DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT TOWSMART.COM.



CUSTOM

A Winston Products Company
TOWSMART.COM
 WINSTON PRODUCTS, LLC.
 30339 Diamond Parkway
 Cleveland, OH 44139