

Hitch, 2" Receiver, Cadillac XT5

INSTALLATION INSTRUCTIONS

READ ALL WARNINGS AND INSTRUCTIONS BEFORE INSTALLATION

⚠ WARNING: Never exceed the vehicle manufacturer's recommended towing capacity.

NOTICE:

- Always use proper tools and safety equipment to ensure a safe and quality installation.
- Inspection of the trailer hitch should be performed before and after each use to ensure all mounting hardware is tight and related hitch components are secure.

⚠ WARNING: Before you begin installation, read all instructions thoroughly.

⚠ WARNING: Safety glasses should be worn at all times while installing this product.

⚠ WARNING: Failure to adhere to exact torque specifications when securing hardware during the installation process can result in damage to the product or your vehicle. This will void the hitch warranty.

LEVEL OF DIFFICULTY: Easy

Installation difficulty levels are based on time and depend on the installer's expertise, condition of the vehicle, and the usage of proper tools and equipment.

WEIGHT CARRYING CAPACITY

Gross Trailer Weight (GTW)	5,000 lb
Tongue Weight (TW)	750 lb

WEIGHT DISTRIBUTION CAPACITY

Weight Distribution (WD)	6,000 lb
WD Tongue Weight (WDTW)	750 lb

PARTS LIST


Item	Qty	Description
1	1	Trailer Hitch
2	6	Carriage Bolt, 7/16-14 x 1-1/2"
3	6	Square Hole Spacer, 0.250 X 0.88 X 2.25"
4	6	Serrated Hex Flange Nut, 7/16-14
5	6	Fish Wire, 7/16" x 20"

TOOLS REQUIRED

Ratchet
Torx Bit, T-10
8" Socket Extension
Torque Wrench
Socket, 17mm
Safety Glasses

PARTS LIST

Item	Qty	Description
1	1	Trailer Hitch
2	6	Carriage Bolt, 7/16-14 x 1-1/2"
3	6	Square Hole Spacer, 0.250 X 0.88 X 2.25"
4	6	Serrated Hex Flange Nut, 7/16-14
5	6	Fish Wire, 7/16" x 20"

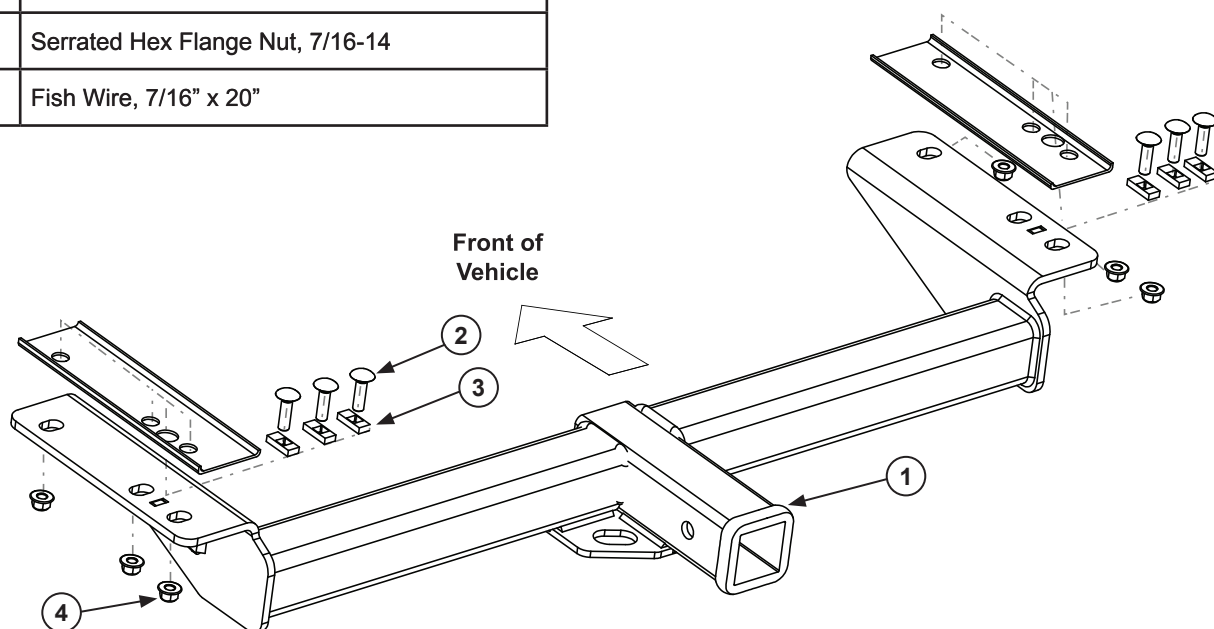

INSTALLATION:

1. To remove the access panel from the rear fascia, use a T-10 Torx bit to remove (2) screws, then pull the access panel straight down and away from the vehicle. (Set access panel and screws aside for reinstallation).
2. Using the standard fish wire technique, fish (3) Square-hole spacers and (3) Carriage bolts through the access hole and out the mounting holes on each side of the vehicle frame. Raise the hitch into position and secure with (3) Flange nuts on each side.
3. Using an 17mm socket and torque wrench, torque all 7/16" hardware to 70 ft-lbs.
4. When hitch is not in use, reinstall access panel removed in Step 1.

FISH WIRE TECHNIQUE:

1. Insert the coiled end of the fish wire tool through the mounting hole in the vehicle frame rail and out the access hole.
2. Thread the coiled end of the fish wire through the spacer and thread the bolt into the coil.
3. Kink the wire to keep the spacer separate from the bolt.
4. Pull the spacer and bolt through the frame and out the mounting hole.
5. Keep the fish wire secure to prevent loss of the bolt or spacer inside the frame rail.

TOWING BASICS & SAFETY INFORMATION :

For information on safe towing, visit TowSmart.com

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT, DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT TOWSMART.COM.



CUSTOM

A Winston Products Company
TOWSMART.COM
 WINSTON PRODUCTS, LLC.
 30339 Diamond Parkway
 Cleveland, OH 44139